 
 
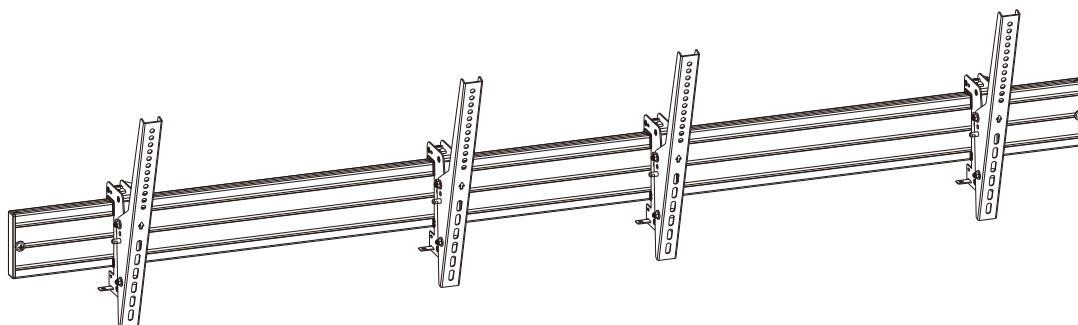 


Installation Guide / Manual (Systems Mount Solutions)

 
Wall Mount (SMS-400 Series)

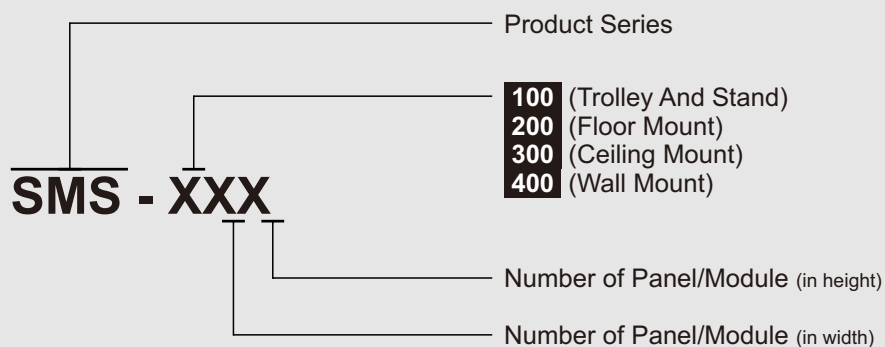


** Illustration Picture
of SMS-422

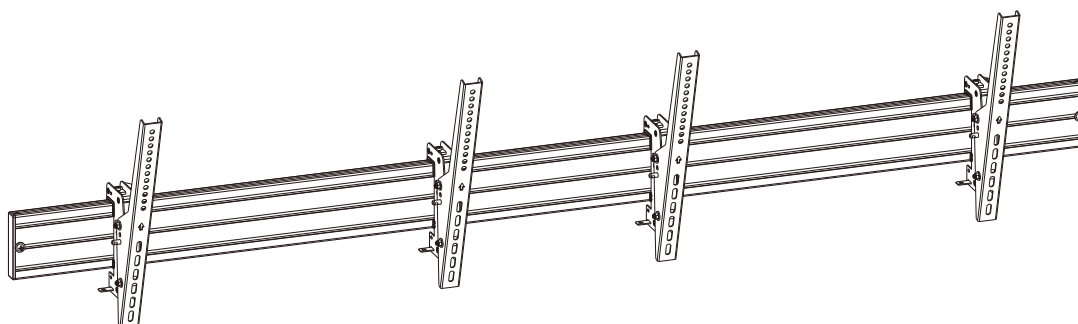

Rail L2000


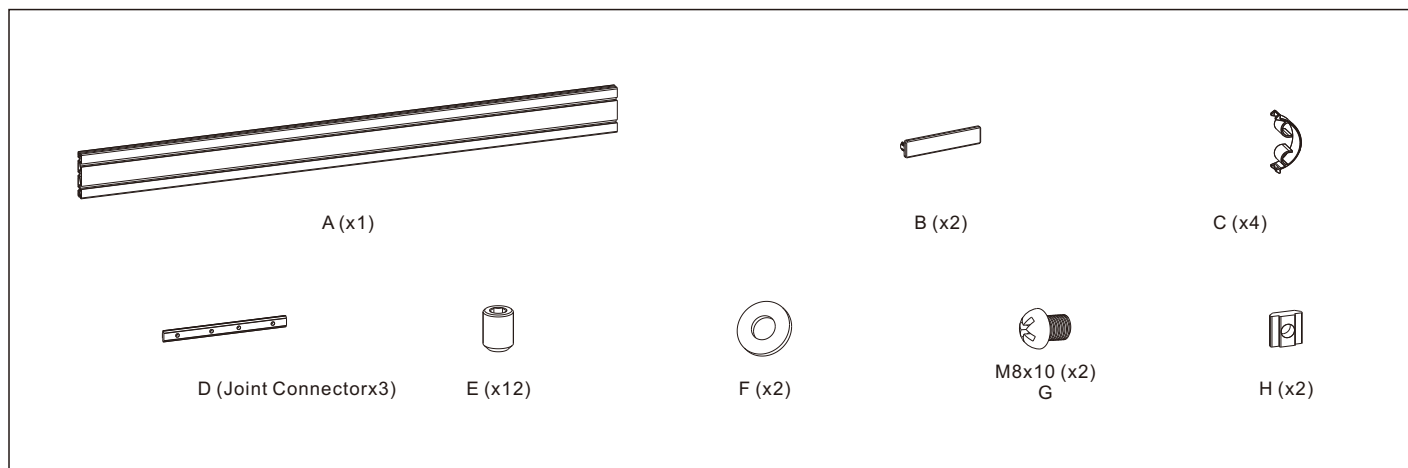


Extend the Rail 2000

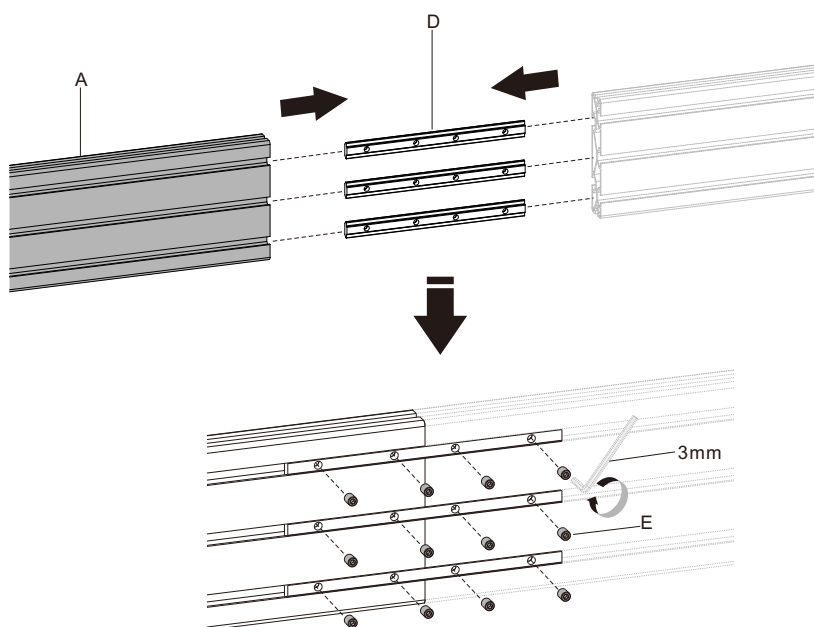 


Install the End Cap

  Cable Management

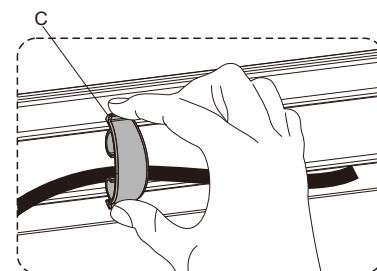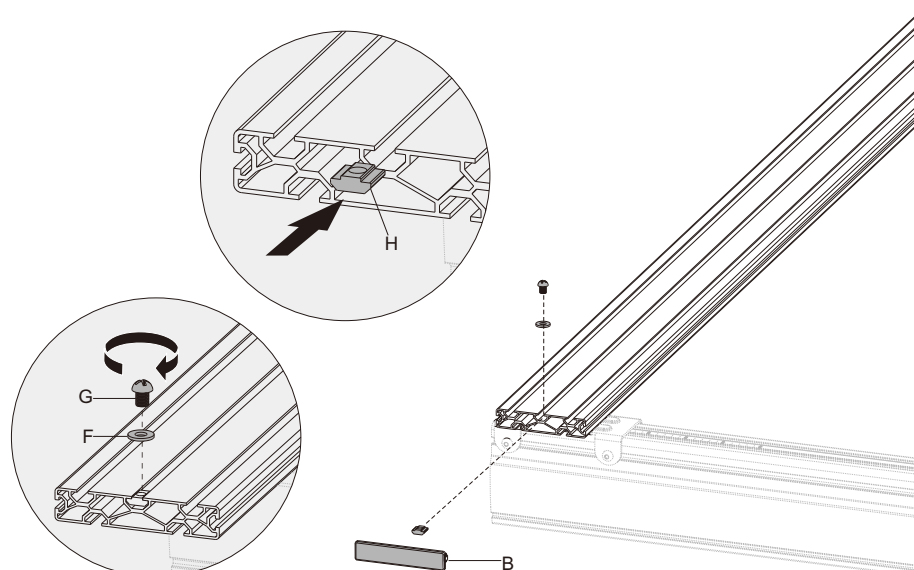

Rail Wall Mount

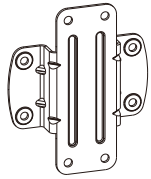 

A (x1)



M8x12 (x4)
B



C (x4)



W-A (x4)

 
 


W-B (x4)



W-C (x4)

Attach Rail Wall Mount to the Rail L2000

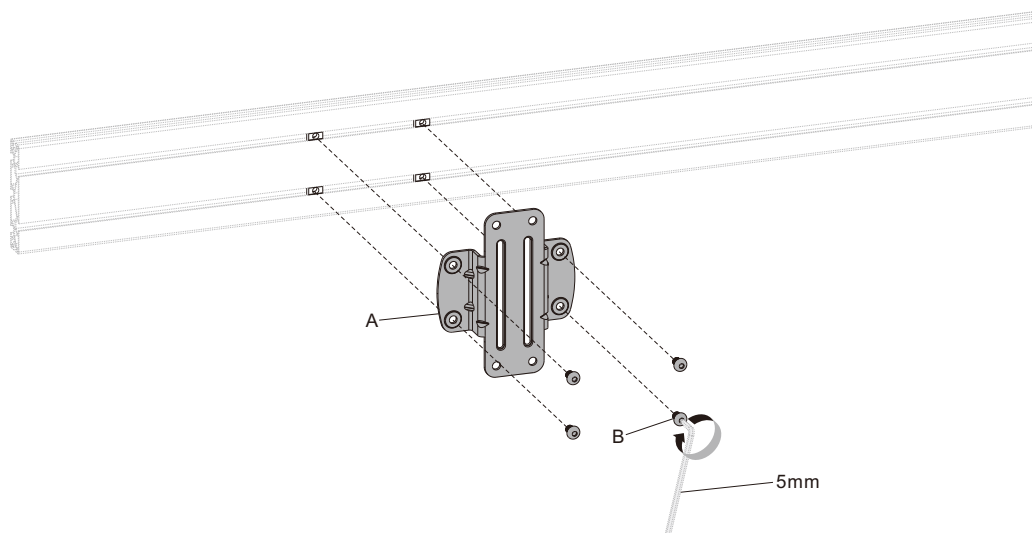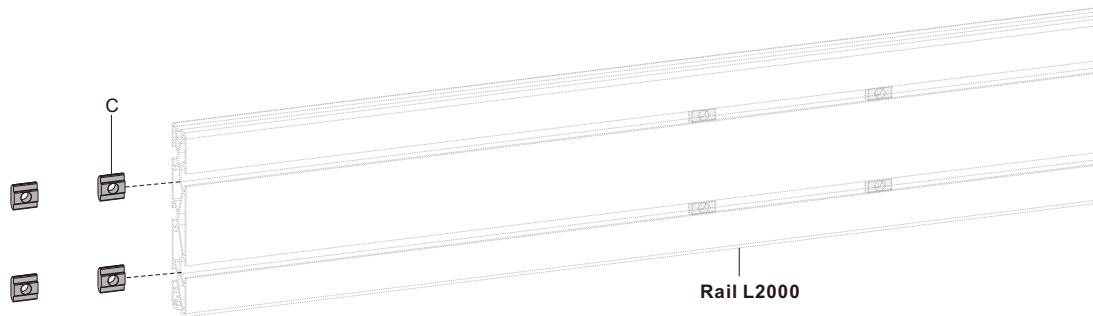

Arm L400 Adj (Option 1)



A (x2)

Package M

M5x14 (x4)
M-A

M6x14 (x4)
M-B

M6x30 (x4)
M-C

M8x30 (x4)
M-D

M8x50 (x4)
M-E

 
 
washers (x4)
M-F

small spacers (x8)
M-G





big spacers (x8)
M-H

Attach Arm L400 Adj



With the arrow pointing up.

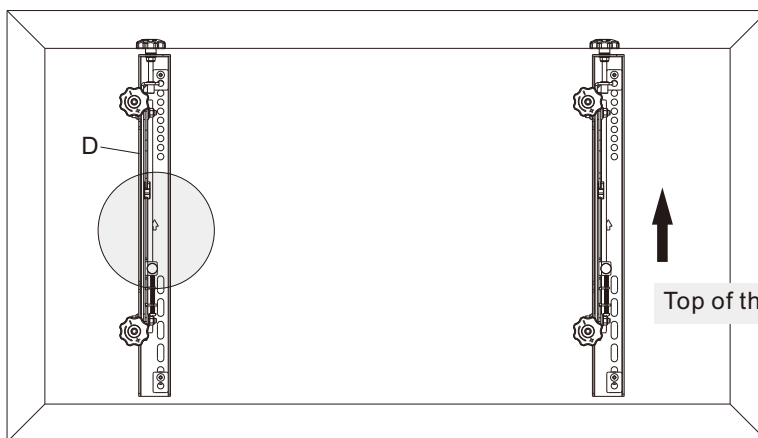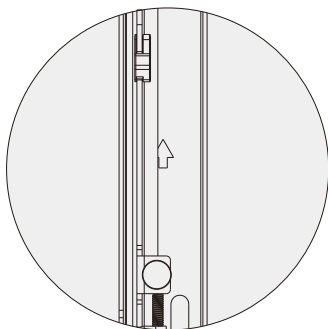

    a. Attach Arm L400 Adj to Flat Back Screen

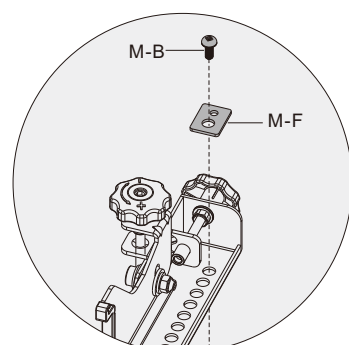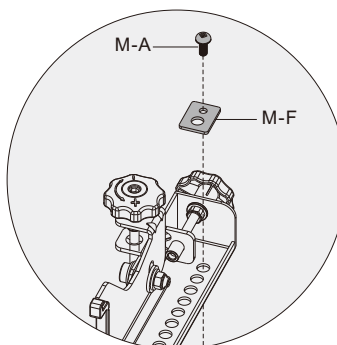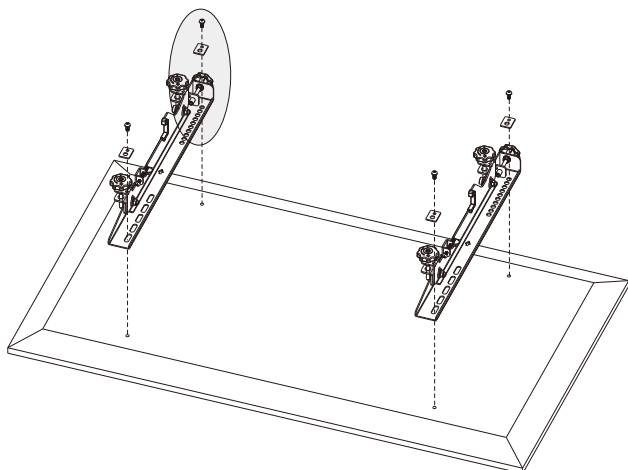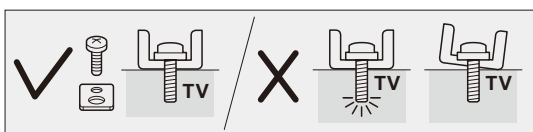

  
b. Attach Arm L400 Adj to Irregular Back Screen

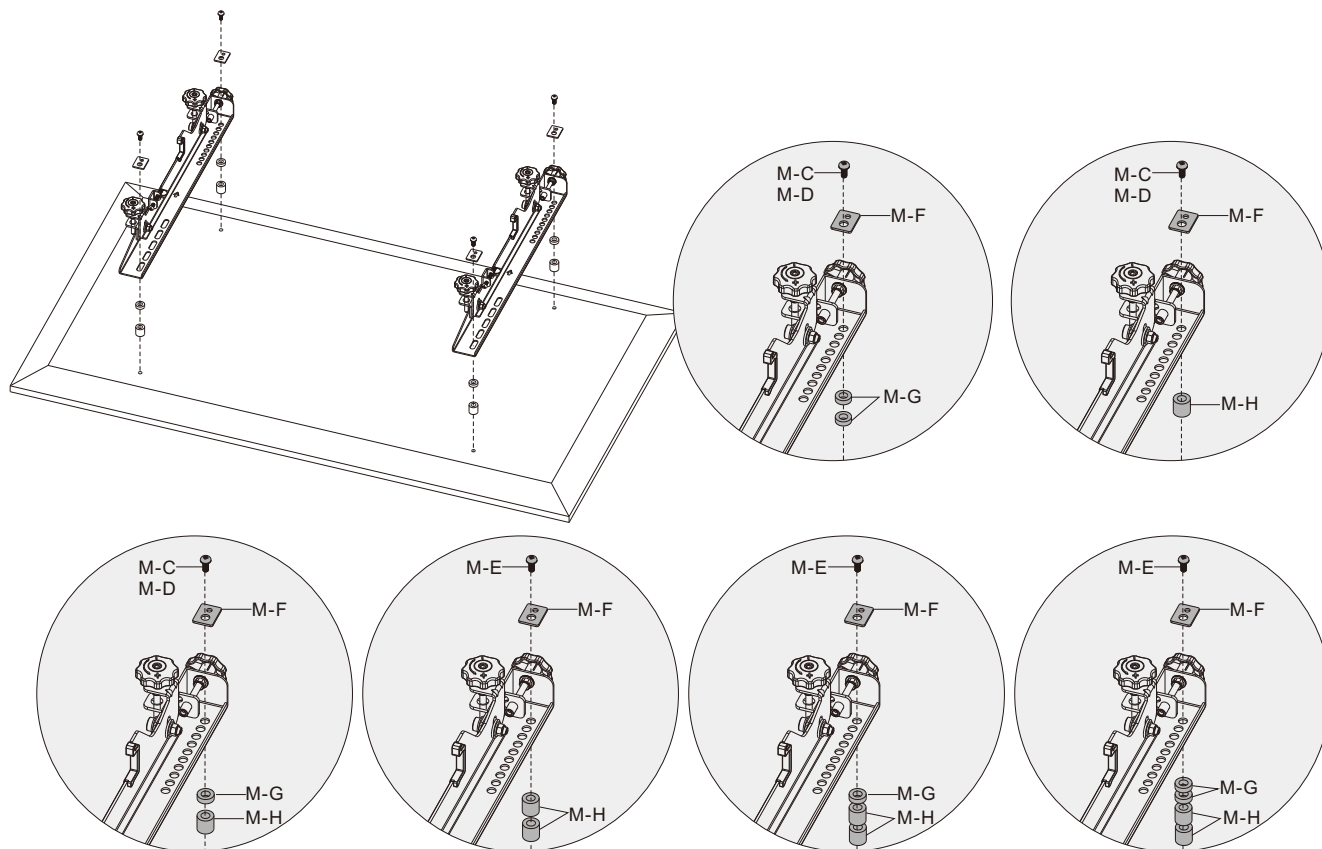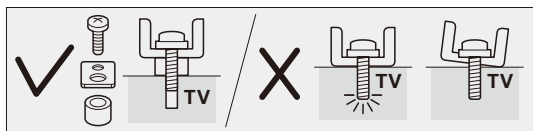


- Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
- Center the adapter brackets on the back of the display as shown, and screw the brackets onto the display, being sure to not over-tighten.

Hang the Screen and Micro-Adjustment

 Z AXIS Adjustment Knob for Height Adjustment / Screen Leveling
Y AXIS Adjustment Knob for Depth Adjustment

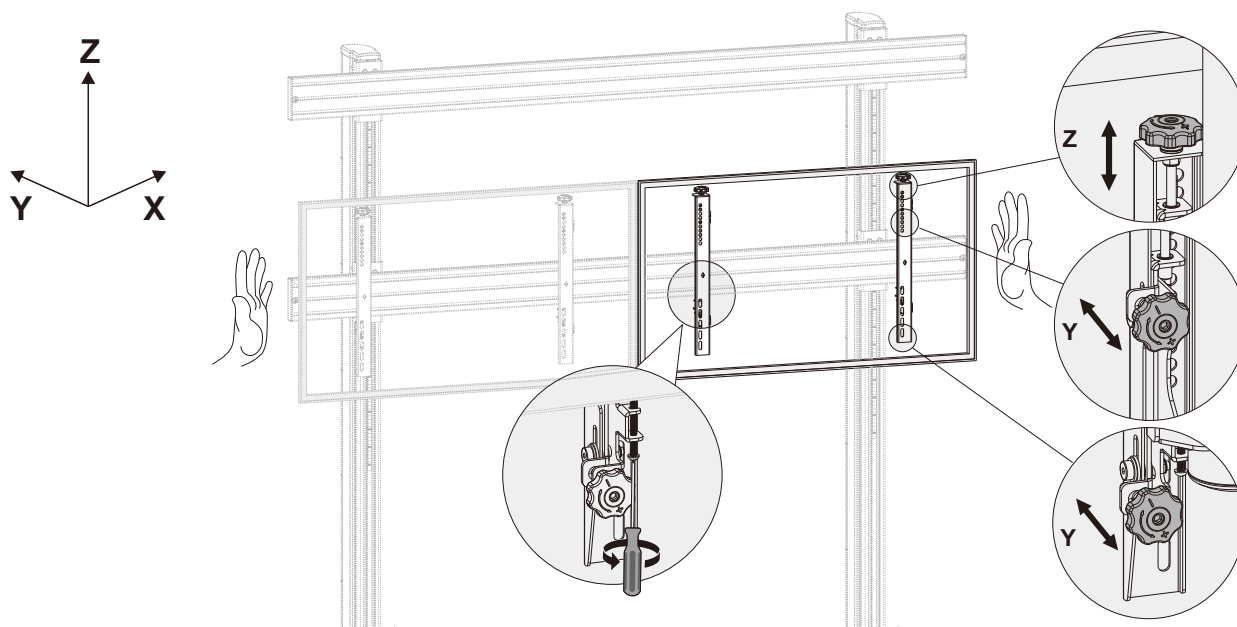

Arm L400 (Option 2)

 

A (x2)



B (x2)

Package M



M5x14 (x4)
M-A



M6x14 (x4)
M-B



M6x30 (x4)
M-C



M8x30 (x4)
M-D



M8x50 (x4)
M-E



washers (x4)
M-F

 


small spacers (x8)
M-G




big spacers (x8)
M-H


Tilt Adjustment

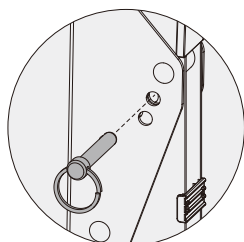


0°

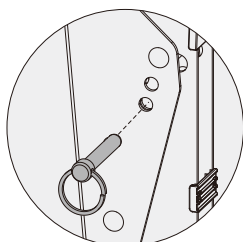 

-5°

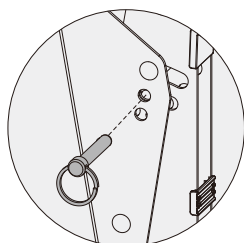 


-10°

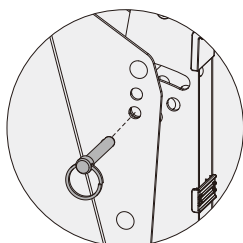 


-15°

 -20°, -15°, -10°, -5°, 0°

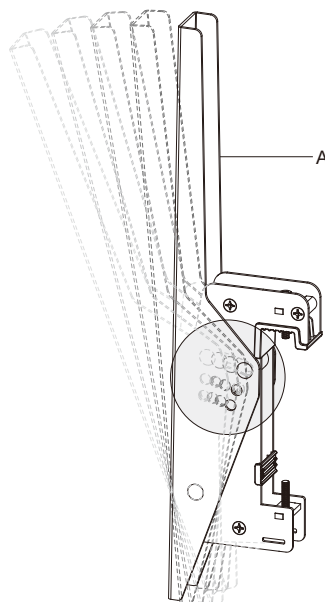


-20° is the natural angle and the safety pin is unnecessary.

 Attach Arm L400




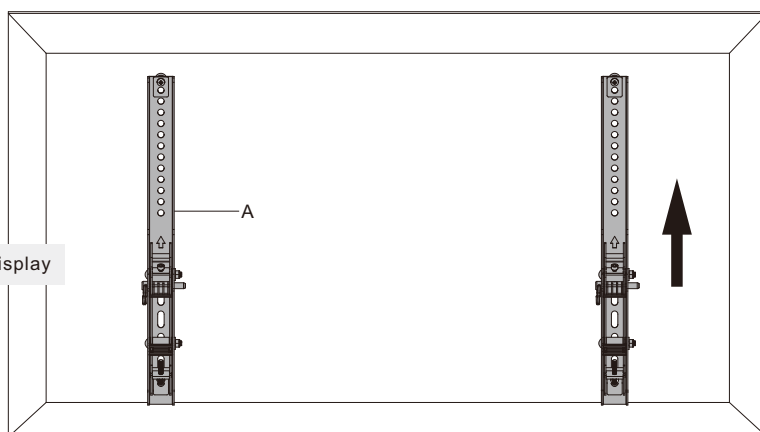


Top of the display








 
With the arrow pointing up

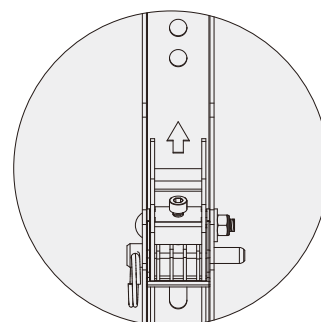

    a. Attach Arm L400 to Flat Back Screen

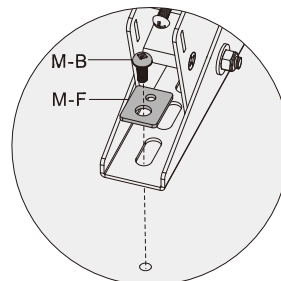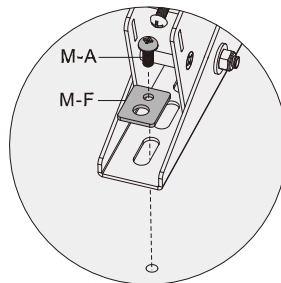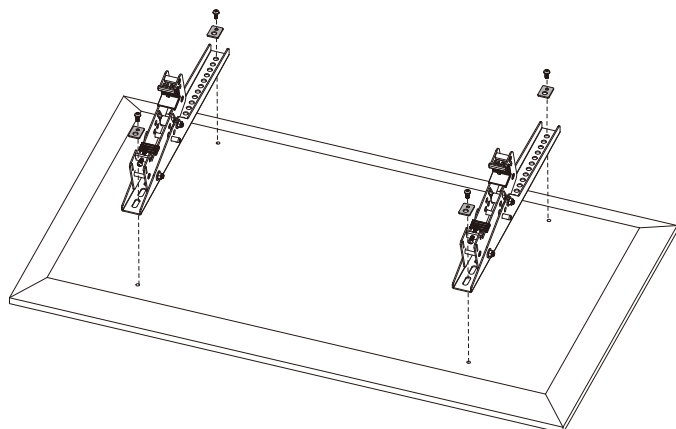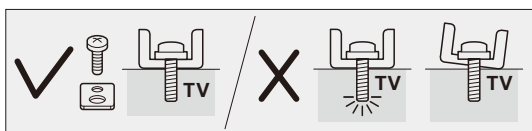

        b. Attach Arm L400 to Irregular Back Screen

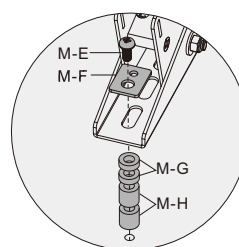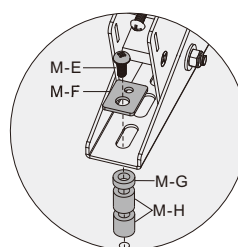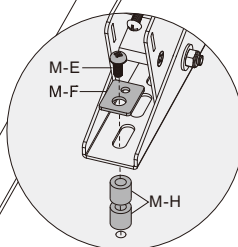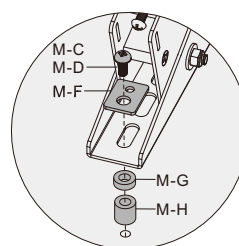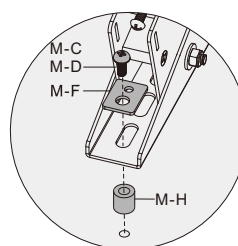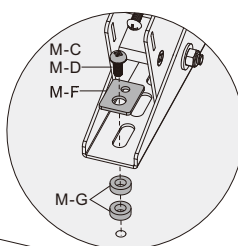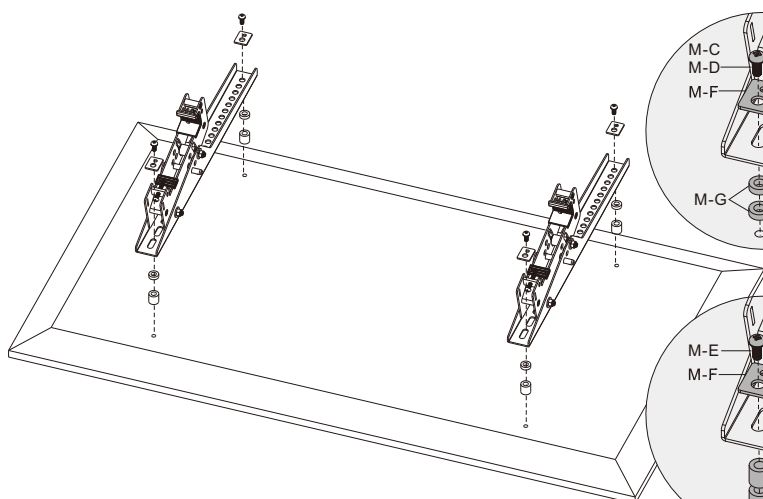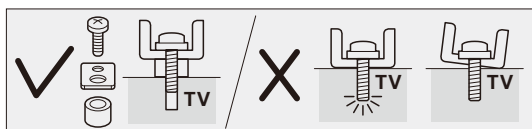

- Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
- Center the adapter brackets on the back of the display as shown, and screw the brackets onto the display, being sure to not over-tighten.

Secure with Padlock

