



Installation Guide / Manual (Systems Mount Solutions)

Trolley and Stand (SMS-100 Series)

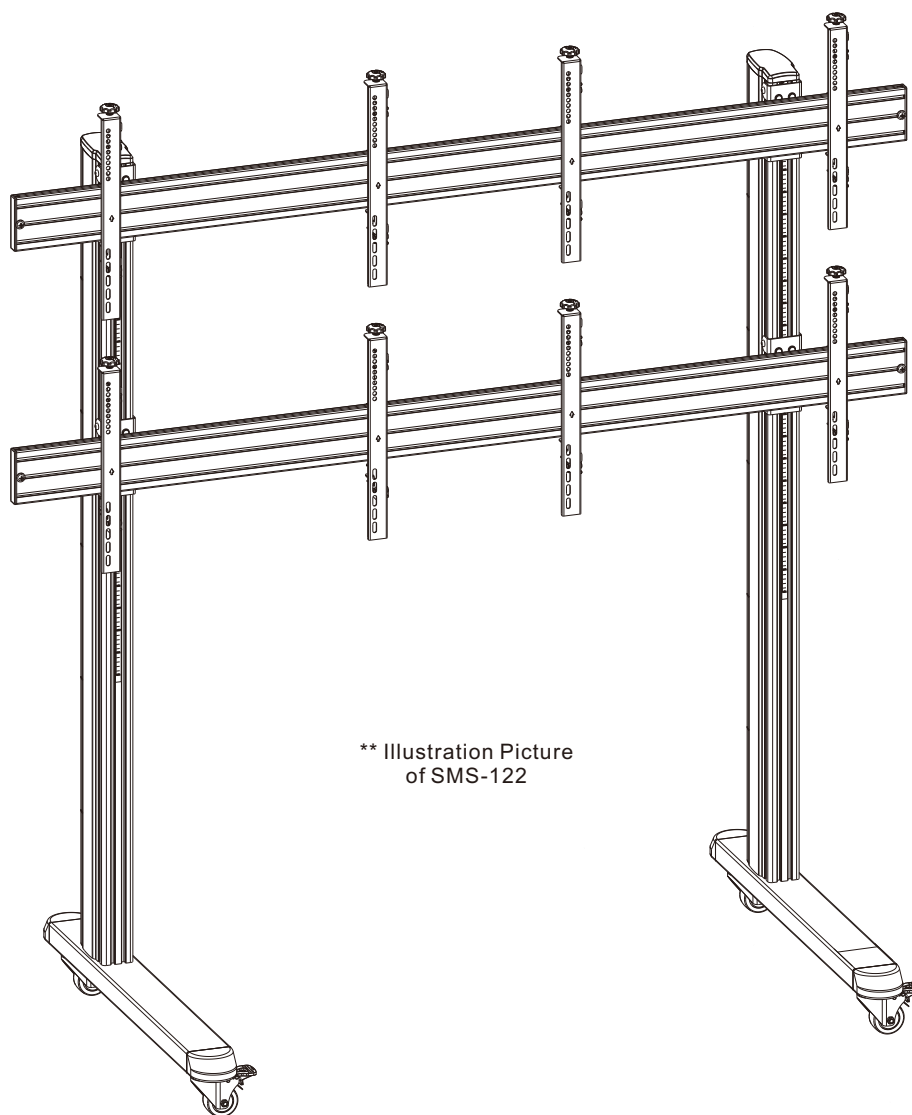

** Illustration Picture
of SMS-122

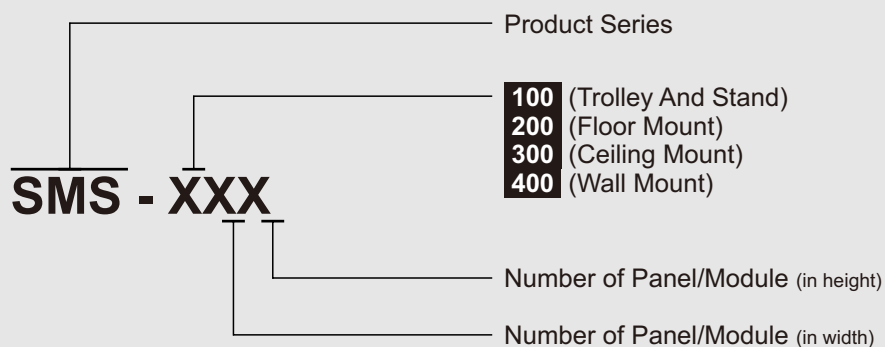

Column L1800



A (x1)




B (x6)




C (x1)


Install the End Cap

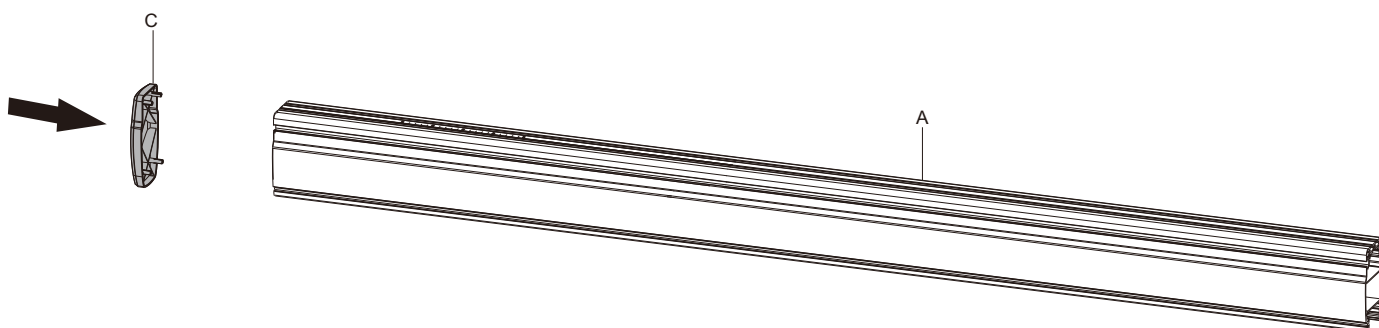


Install Cable Cover (included) and Power Socket (Optional)

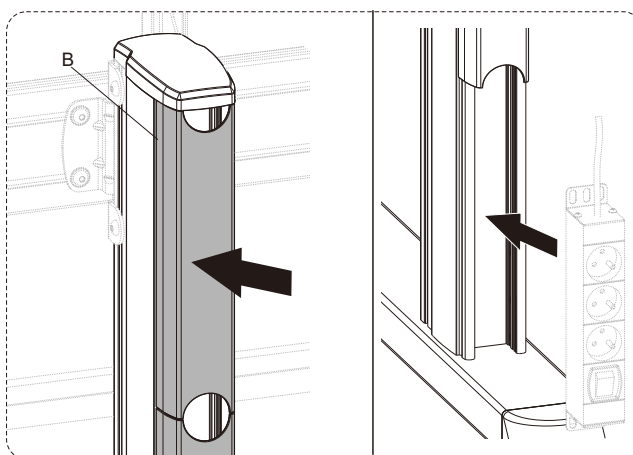

Rail L2000


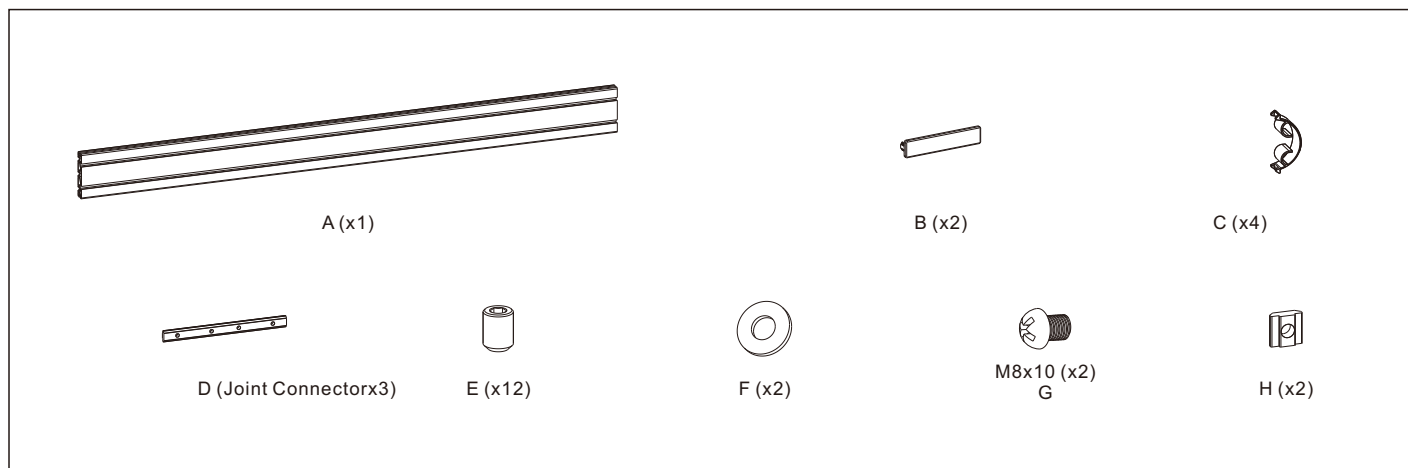


Extend the Rail 2000

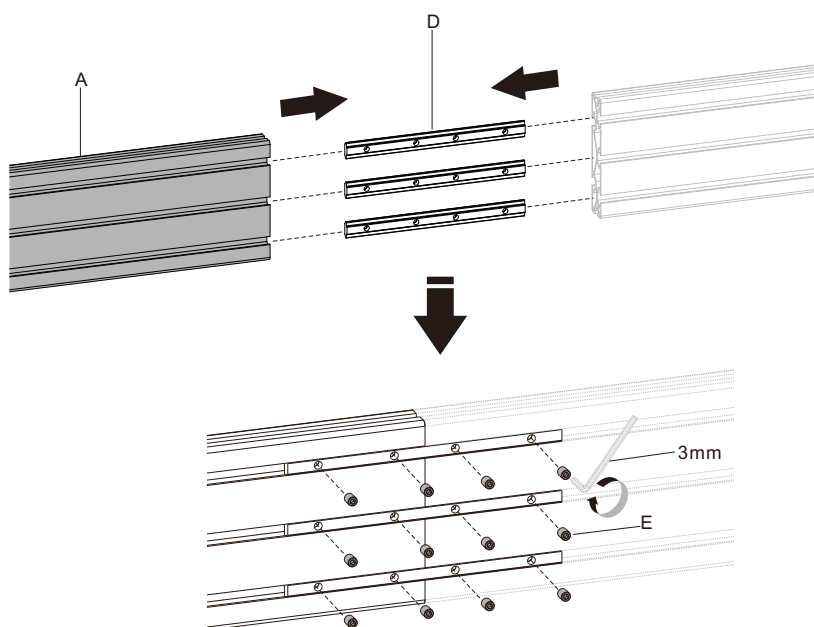


Install the End Cap

Cable Management

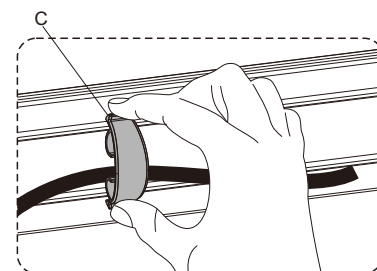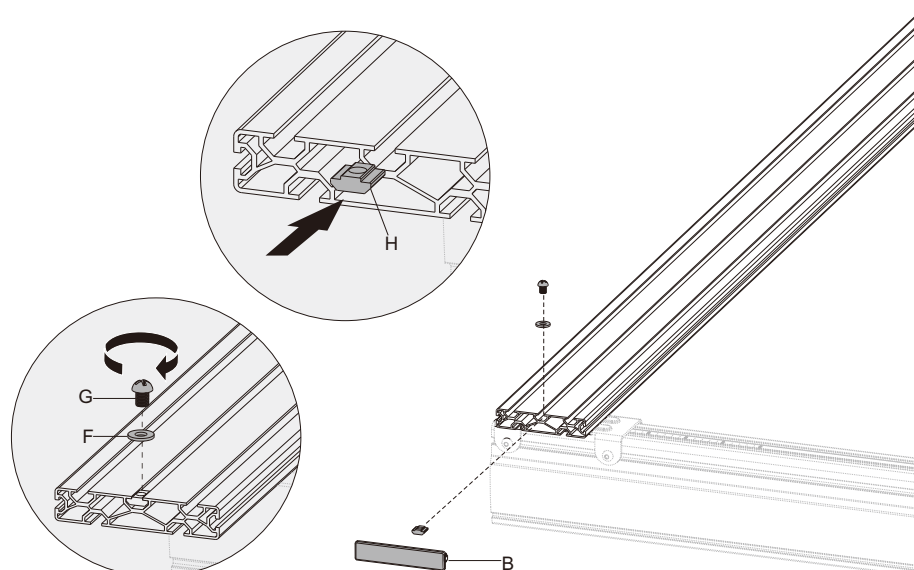

Cross Column Mount

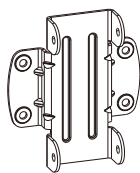

A (x1)




M8x12 (x8)
B




C (x8)


Attach Cross Column Mount to the Column

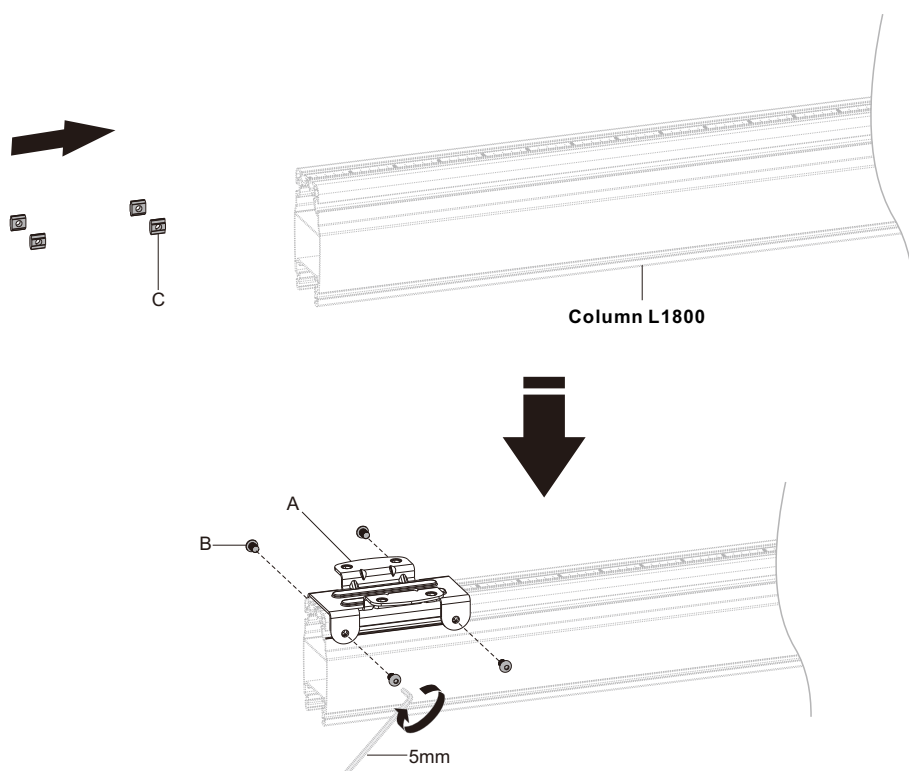

Attach Column to the Rail L2000

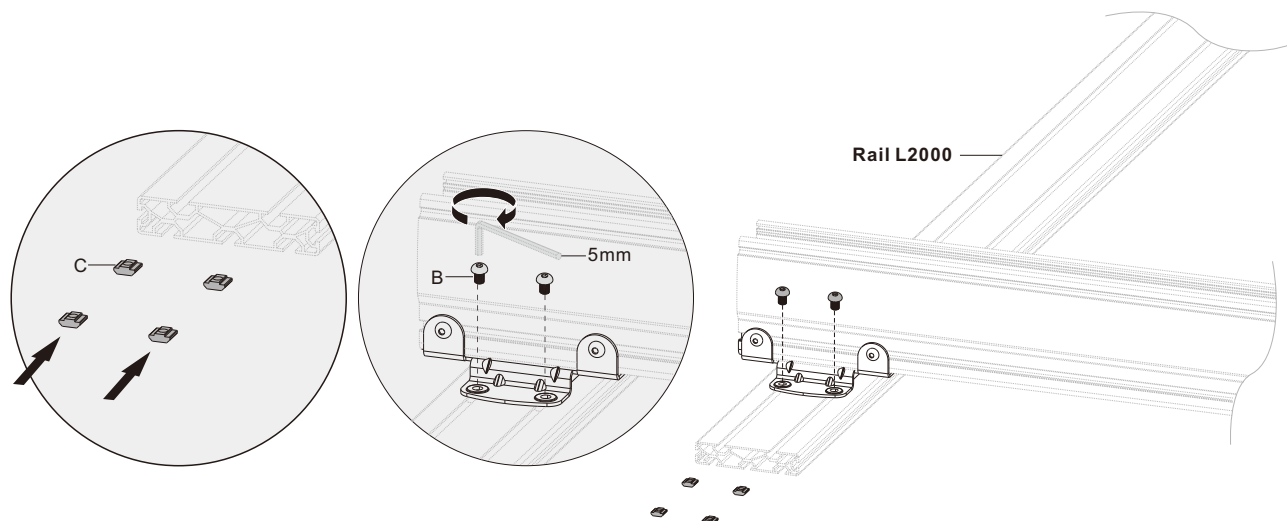

Base Bar



A (x1)



B (x2)






C (x1)




M8x90 (x4)
D

Assemble the Base Bar


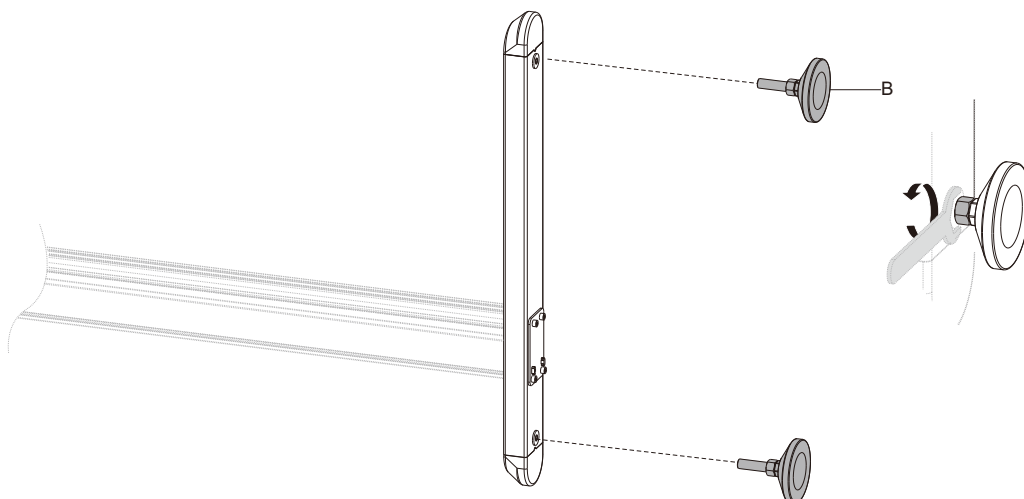
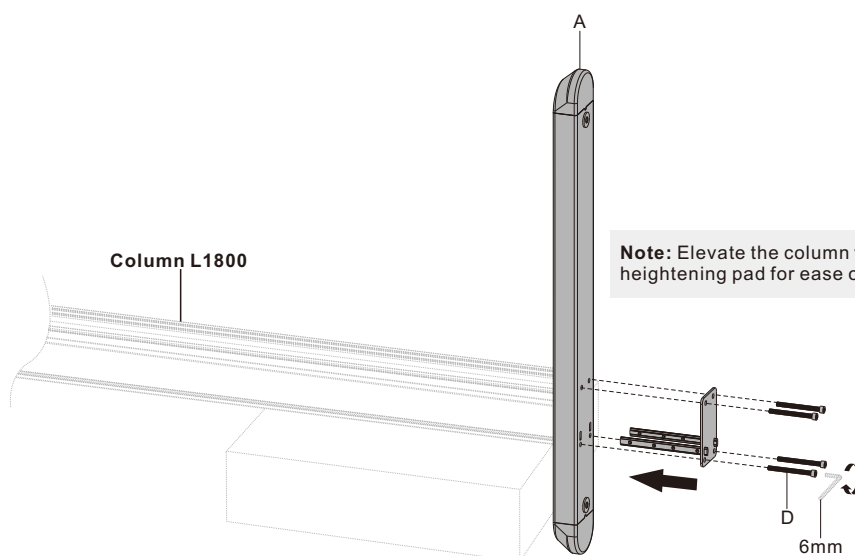
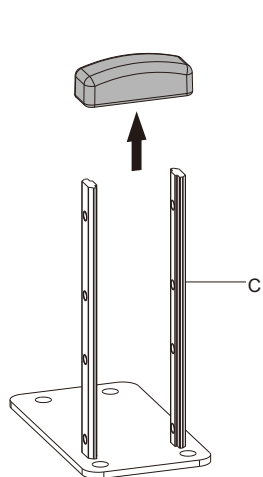


Caster Wheel

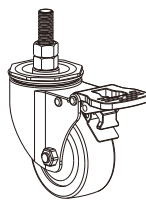

A (x2)

Assemble the Base Bar

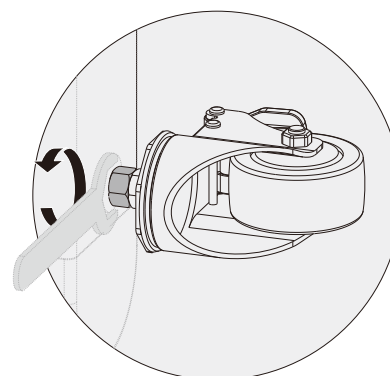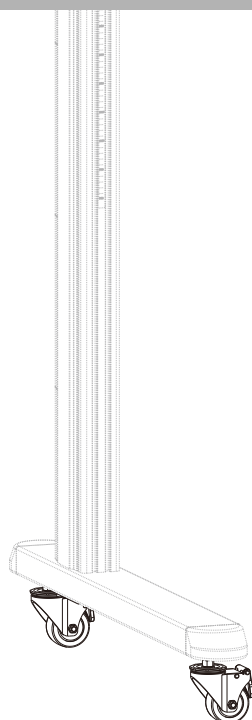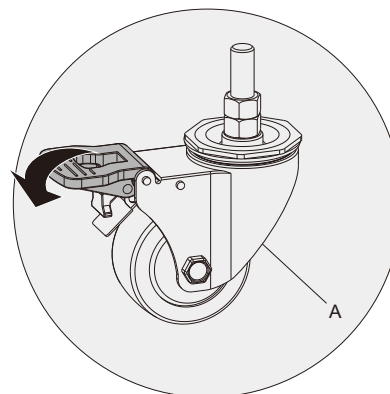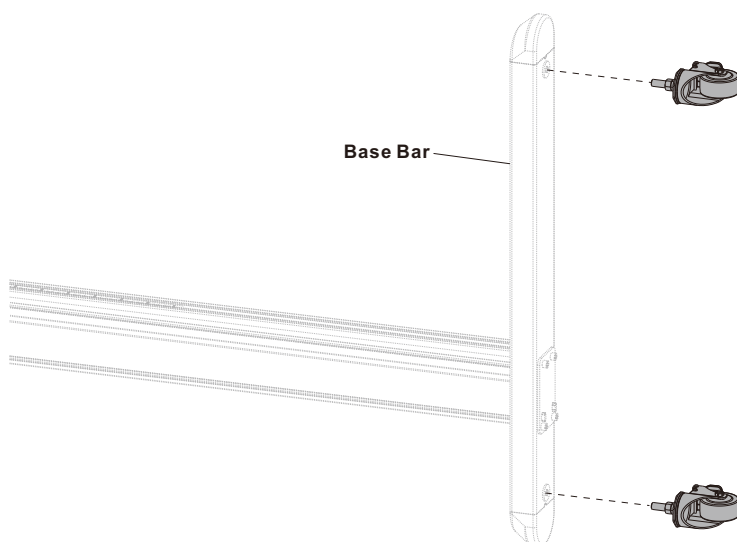

Arm L400 Adj (Option 1)



A (x2)

Package M

M5x14 (x4)
M-A

M6x14 (x4)
M-B

M6x30 (x4)
M-C

M8x30 (x4)
M-D

M8x50 (x4)
M-E



washers (x4)
M-F

small spacers (x8)
M-G





big spacers (x8)
M-H

Attach Arm L400 Adj



With the arrow pointing up.

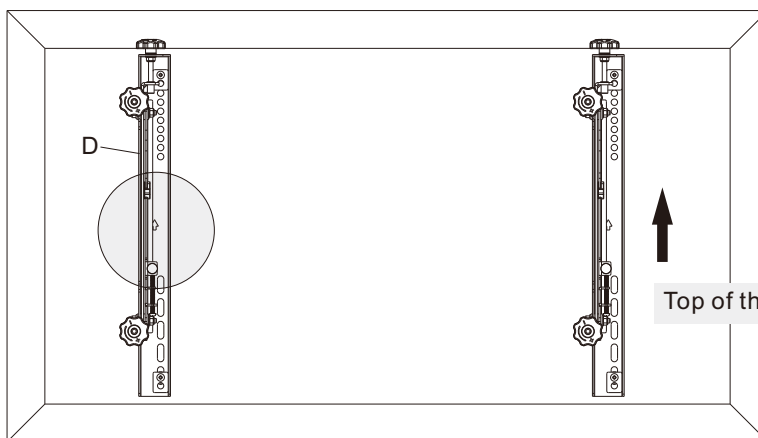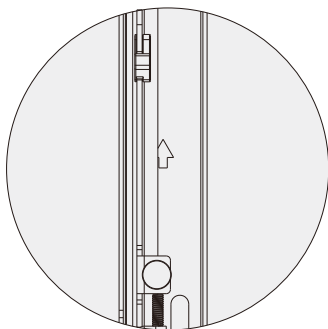

a. Attach Arm L400 Adj to Flat Back Screen

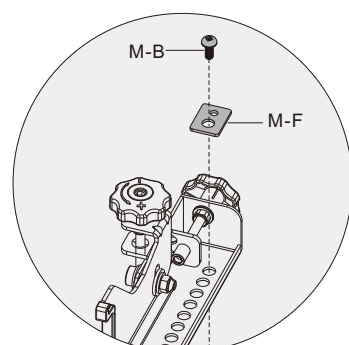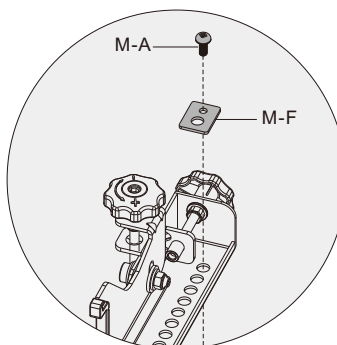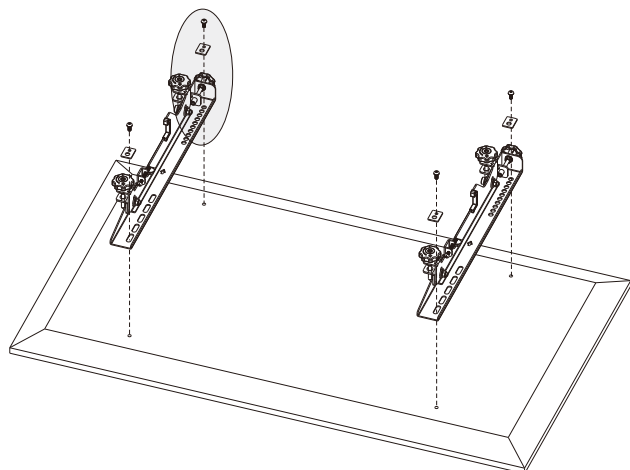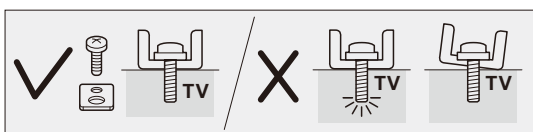


b. Attach Arm L400 Adj to Irregular Back Screen

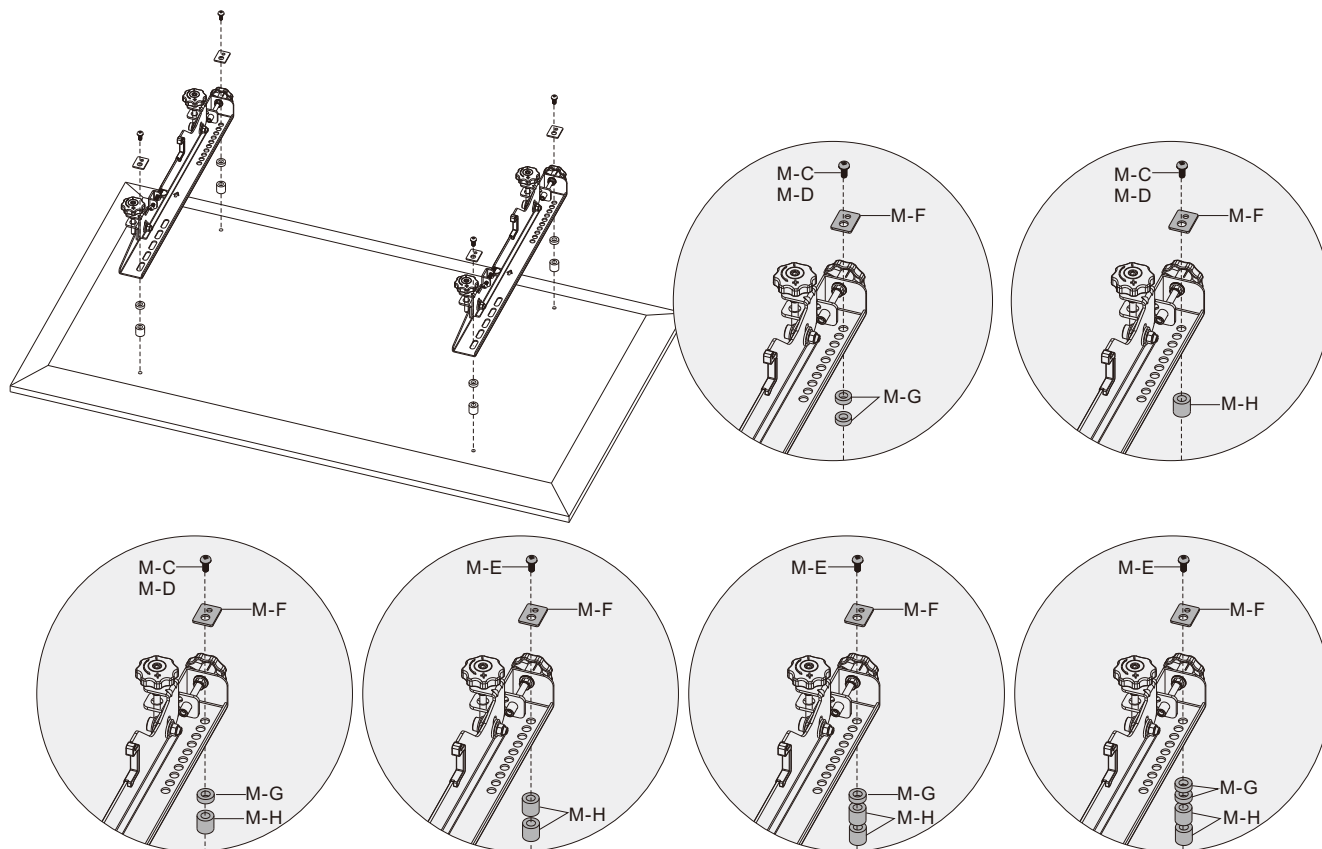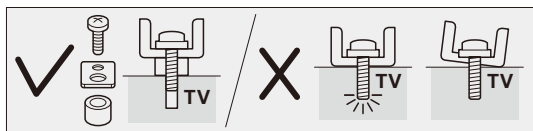


- Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
- Center the adapter brackets on the back of the display as shown, and screw the brackets onto the display, being sure to not over-tighten.

Hang the Screen and Micro-Adjustment


Z AXIS Adjustment Knob for Height Adjustment / Screen Leveling
Y AXIS Adjustment Knob for Depth Adjustment

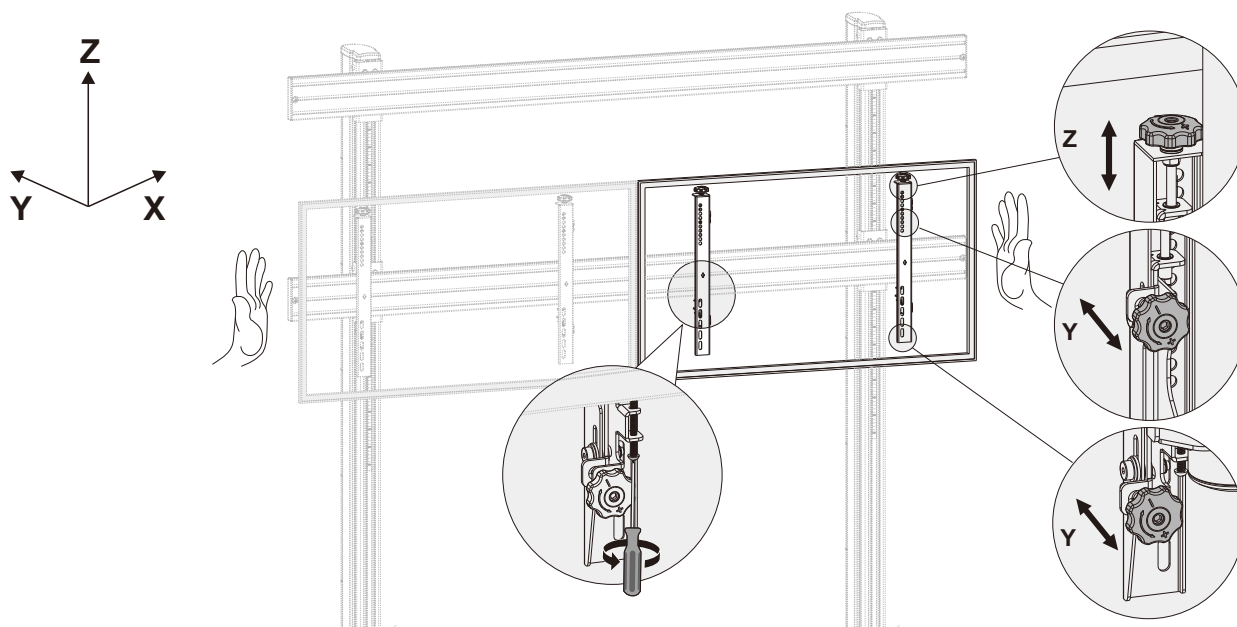


Arm L400 (Option 2)

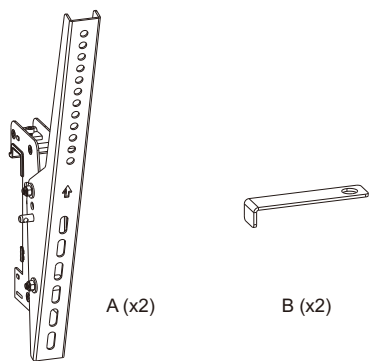

Package M

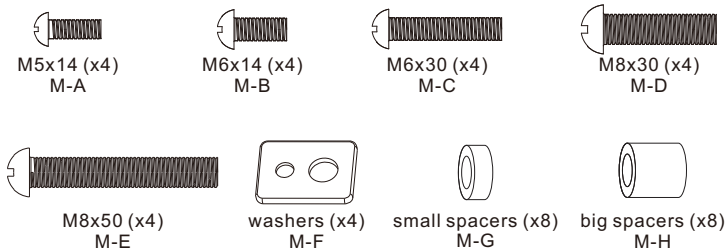


Tilt Adjustment

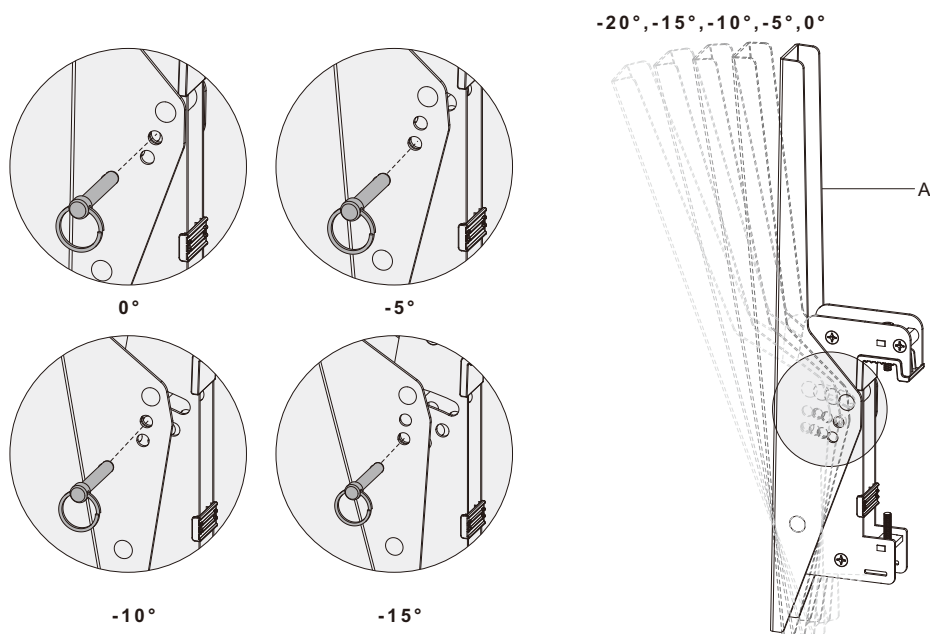


-20° is the natural angle and the safety pin is unnecessary.





Attach Arm L400

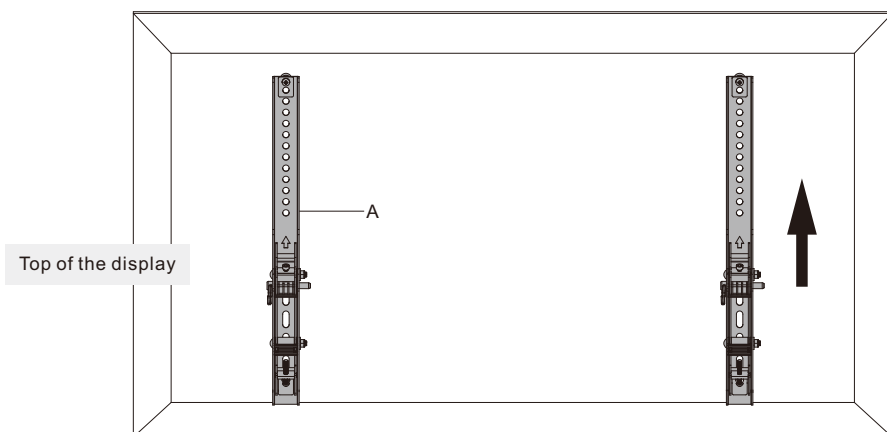









With the arrow pointing up

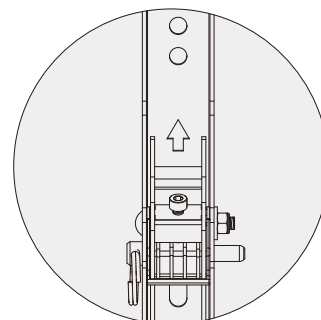

a. Attach Arm L400 to Flat Back Screen

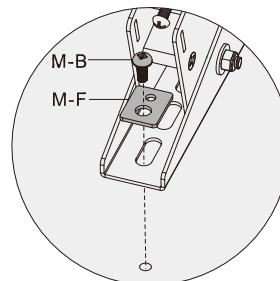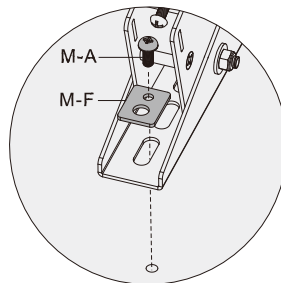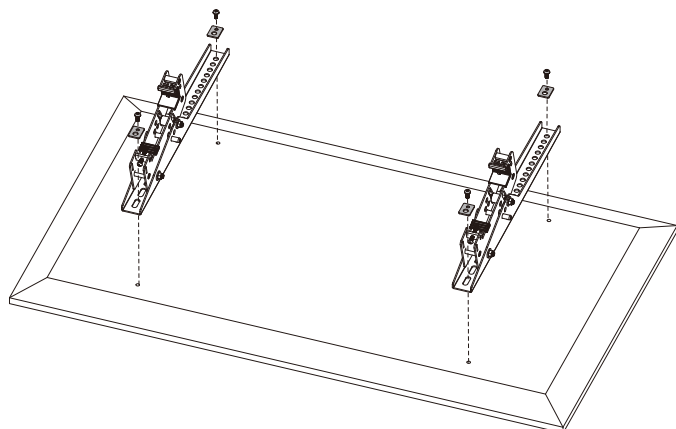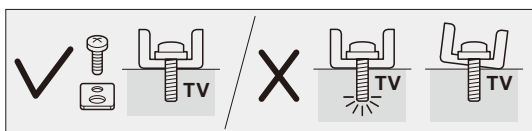

b. Attach Arm L400 to Irregular Back Screen

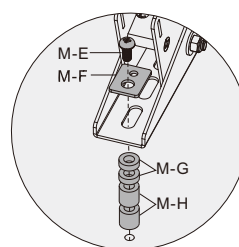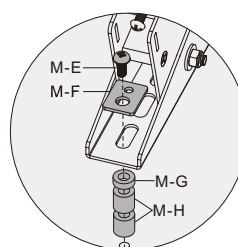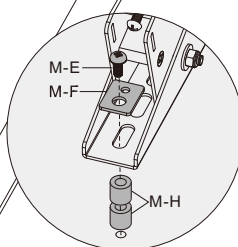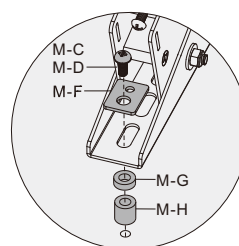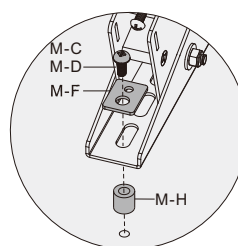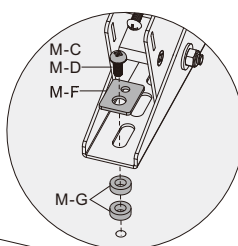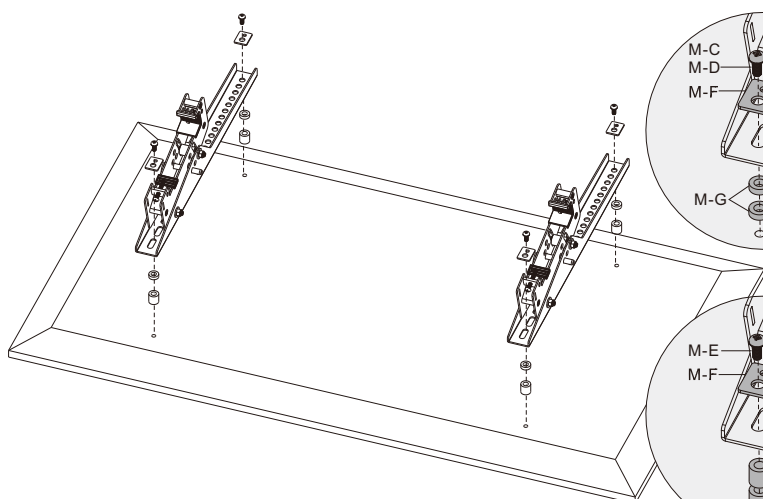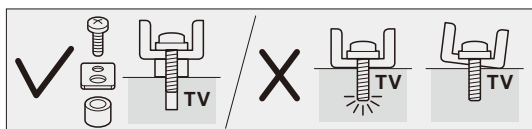

- Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
- Center the adapter brackets on the back of the display as shown, and screw the brackets onto the display, being sure to not over-tighten.

Secure with Padlock

